©CTAVUE

SIMBLES

LUXICAM






SECURING YOUR WORLD

USER MANUAL


SMART SIP ONVIF SPEAKER

In this document you will find the steps to add an Speaker, through our NVR's or Camera,


The SPK-IP30W-POE can be connected to the system either directly to the NVR or via a switch.

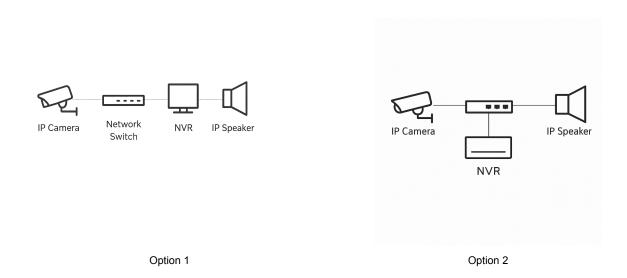


You will need to use <u>GSD ONVIF Speaker Search Tool</u> to search for the speaker or change the ip address if needed, before adding it to the NVR.

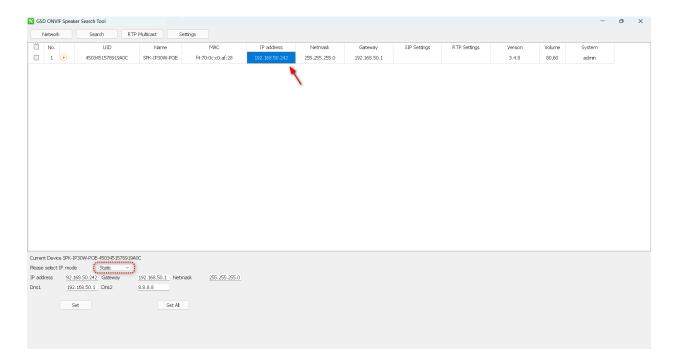


To add the speaker to an NVR, log in to its web interface. From there, go to the "Alarm" section, and then select the "Voice Prompts" option.

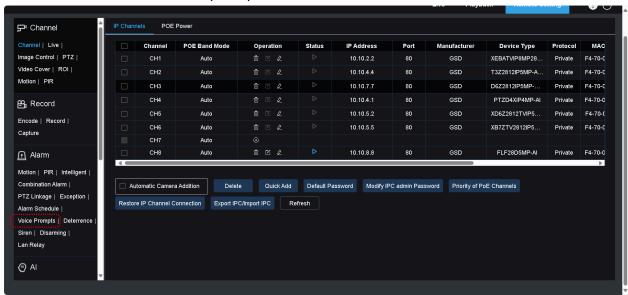


In this section you will find the option "IP Speaker"

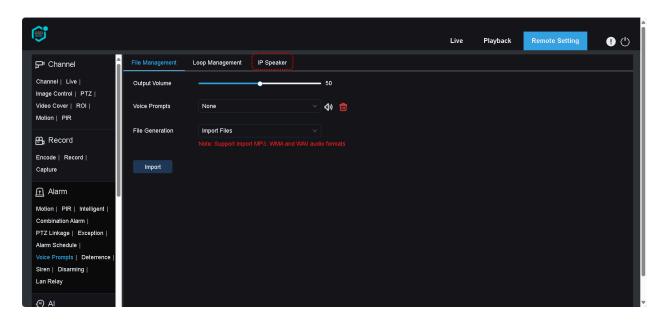

Upon selecting this option, the system will prompt you to add the speaker. It is crucial to accurately input all the necessary speaker details and then save the configuration to ensure the changes are applied successfully.

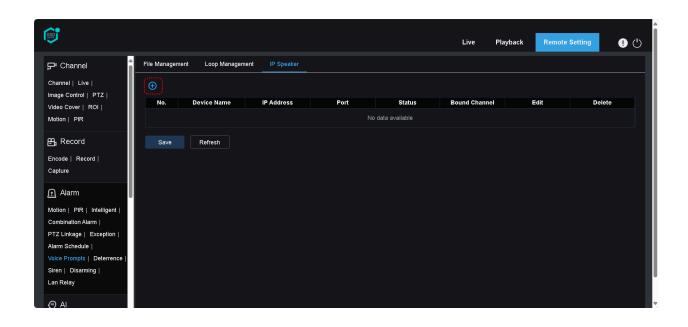

To connect to the device, enter the IP address and username.

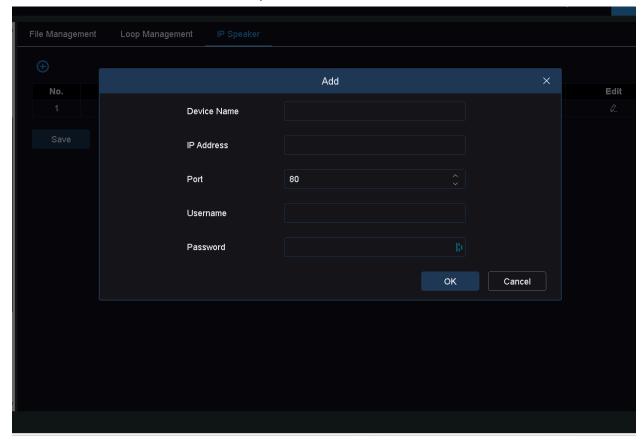

After all parameters have been set, the device will be added to the NVR. Before exiting this section, remember to save your configuration.



Note: Speaker settings can be located under voiceprompts or Siren.

In case of a **SPK-30W-12V** the speaker needs to be connected via RCA audio port output and 12v connection, either connected to a NVR-DVR (if supported) or camera.

This wiring configuration also supports connecting multiple devices. (using a splitter).



The necessary accessories for both 12V and RCA audio output connections will be as follows.







SECURING YOUR WORLD



gsdgroupinc.com



1 (866) 791-7020



sales@gsdgroupinc.com



180 Boul Bellerose Ouest, Suite 100, Laval QC H7L 6A2



facebook.com/GSDGROUPINC



linkedin.com/company/g-s-d-group/



https://www.youtube.com/@gsdgroupinc